

Nokeval

No 130302 v3.0

User's Manual

**Model 910&920-2011
for process inputs**




Contents

General Description	3
Process Dipsplay series 900	3
Indicator family 2000	3
Technical specification	4
Dimensions	4
How to order	4
Front panel	5
Configuration stage	5
Resetting access code	5
Alarm level setting	5
Alarm setting	5
Configuration	6
Configuration parameters	7
Alarms	7
Dec - number of decimals	7
Lo Hi - display scaling	7
Lowpass filter	7
Steppass filter	7
Dead - dead zone around zero	8
Intens - display brigtness	8
Input selection	8
External contact function	8
Access code functions	8
Teaching potentiometer position	8
Connections	9
Voltage / current-input	9
2-wire transmitter	9
Input/output cards	9
Potentiometer	9
External contact	9
Series 900 construction	10
900 series input and option cards:	11
Modular indicator serie 2000	11

Manufacturer:
Nokeval Oy
Yrittäjäkatu 12
37100 NOKIA, FINLAND
Tel. +358 (0)3 342 4800
Fax. +358 (0)3 342 2066
<http://www.nokeval.com>

Large panel display 910 & 920-2011

Indicators 5-digit display can be used for values which demand large numerical value but where the 'true span' is narrow.
e.g. input 4-20 mA corresponds altitude from sea level 54,00(Lo 4 mA)...58,00 m (Hi 20 mA).

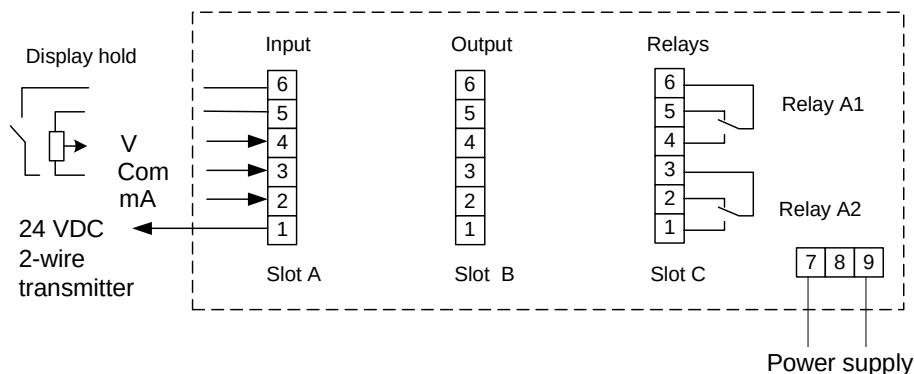

General Description

Large display series 900-2011 is designed for general process inputs 0/4..20 mA, 0..5/10V and potentiometers 100Ω-10 kΩ. Designers main goal has been to achieve a unit with fast introduction time and easy of use. Input selection and display scaling can be easily done by back panel keys (4 keys). Optional alarm level and hysteresis - additional card 2000-REL with two relays - can also be easily controlled from indicators back panel.

Measuring accuracy is 0,05% FS (15 bits) and it is designed for 3-4 digit panel mounted process display. When wider span is used display value can be stabilized with freely selectable filter. This operation makes it possible to use this indicator even as 5 digit display. If larger numerical value is required same time with fast display updating time it is recommended to use indicator model 2021.

Decimal point position is freely selectable. Separate access codes for configuration and alarm level control can be selected. Display brightness can also be selected via front panel keys.

There are two alternative power possibilities, one for mains voltage 85..230 VAC and the other for 12-32 VDC or 24 VAC. Both are galvanically isolated from input. Indicator can supply 24 VDC / 150 mA to sensor or to other field equipment.

Indicator family 910 & 920

Process displays are a part of a larger product family. This series indicators are easy to modificate for different type of inputs e.g. 2011 can be changed for Pt100 / thermocouple input simply by changing the input card to type 2021. This kind of modification doesn't require any kind of calibration, user only configures the unit with front panel keys.

When input card is changed it changes also the model type. e.g. if process indicator 2011 is modified for strain gage indicator with 2041-STG input card, the model will change to 2041.

This model 2011 is basic indicator in this series. If You require min / max value memory, more alarm relays, temperature input or better accuracy, You should use the model 2021 indicator.

Technical specification

Process inputs: 0..20 mA, 4..20 mA,
0..5 V and 0..10V
Range: -9999..99999
f.ex. 4-20 mA= 58.500..59.500
(span 10.00)
Display hold: by closing contact
Input resistance: current 50 Ω ,
voltage input >1 M Ω
Accuracy: 0.05% FS
Sensor supply: 24 VDC, max. 40 mA

Potentiometer: 100 Ω -10 k Ω
Reference voltage: 2.5 V max load current 25 mA
Accuracy: 0.05 % FS

**Alarms:
(option)** 2 alarms, relays max 240 VAC,
2 A, selectable hysteresis 100%,
automatic or manual reset,
selectable direction

General:
Input filter: Digital, freely selectable
AD-converter: 15 bits (1/32000)
Measuring speed: 7 meas. /second
Temperature effect: 0.005 %/ $^{\circ}$ C
Alarm indicators: 2, A1 and A2

Display (910) 5 digit bright red LED, height
57 mm, brightness adjustable


Display (920) 4 digit bright red LED, height
100 mm, brightness adjustable

Power supply: 85..240 VAC or
12..30 VDC / 22..28 VAC
Consumption: max. 12 W without sensor supply.
Case material: Aluminium, black
Terminals: 2.5 mm² removable
Weight: 1.5 kg

How to order

910-2011-REL2-24VDC

Model 910 (57 mm)
or 920 (100 mm)
Input card
Alarm card REL2
Power supply
24 VDC

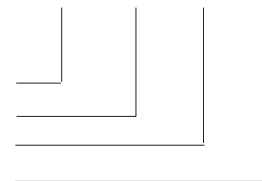


Optional cards:

Alarm card REL2

I


Dimensions:

Model 920E4-2061

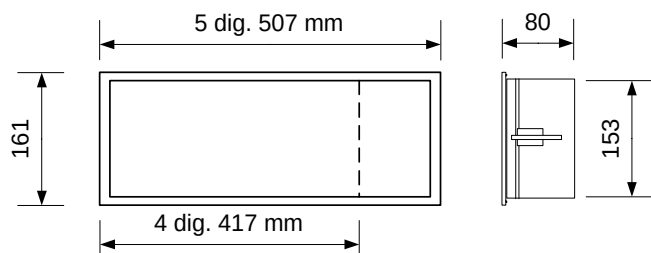

Model 910E5-2061


Cut out model 920E5

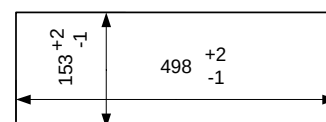

Model 920E4 Cut out,
408 (-1..2 mm) width

Programming keys

The display of the back panel serves as parallel display to main display.

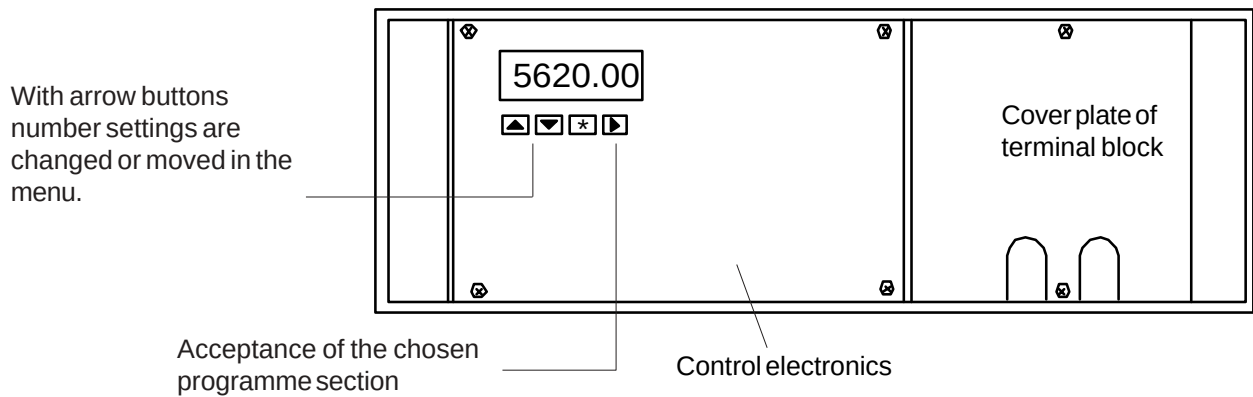

Programming state

The programming state is achieved by pressing the button ★ and ▲ simultaneously for 2 seconds. In the programming state, among others, the scaling of the display, sensors and alarm form are being placed. See up the programming in more detail in the section.

Resetting of programming parameters

The return of programming parameters as factory arrangements will be obtained by pressing the buttons of the 2 second time ★ and ▲ simultaneously when the power is switched on. This resets also password (if forgotten).

Alarm settings

The alarm levels can be set only in the programming state because the alarm lights are not available in the front panel.


Secret code

If a password (ALCode) has been set for configurations it must be fed before it is able to move configuration stage (it only asks if it has been set).

Setting of alarm value

You can set alarm value by ▲▼-keys number by number. Setting starts from largest number from left to right. You may go to next number by ►-key. Exit by ★-key.

Number setting

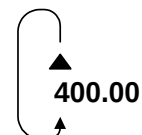

▲▼
Numbers
0...9 and , (decimal)

Configuration


Configuration can be started by pressing and holding ★- and ▲-keys simultaneously for 2 seconds. Arrow keys ▲▼ moves up and down in main menu. Desired function is selected with ►-key. Save mode can be selected directly by pushing ★-key in main menu. To save and exit, push ► while save is displayed.


Alarm values can be selected in configuration mode or in measuring mode. Hysteresis and alarm type can be selected only in configuration mode.

Changes can be restored by selecting text UnDO into display and pressing ►-key. **Note!** Detailed configuration stage description on next page.

Beginning

★- and ▲

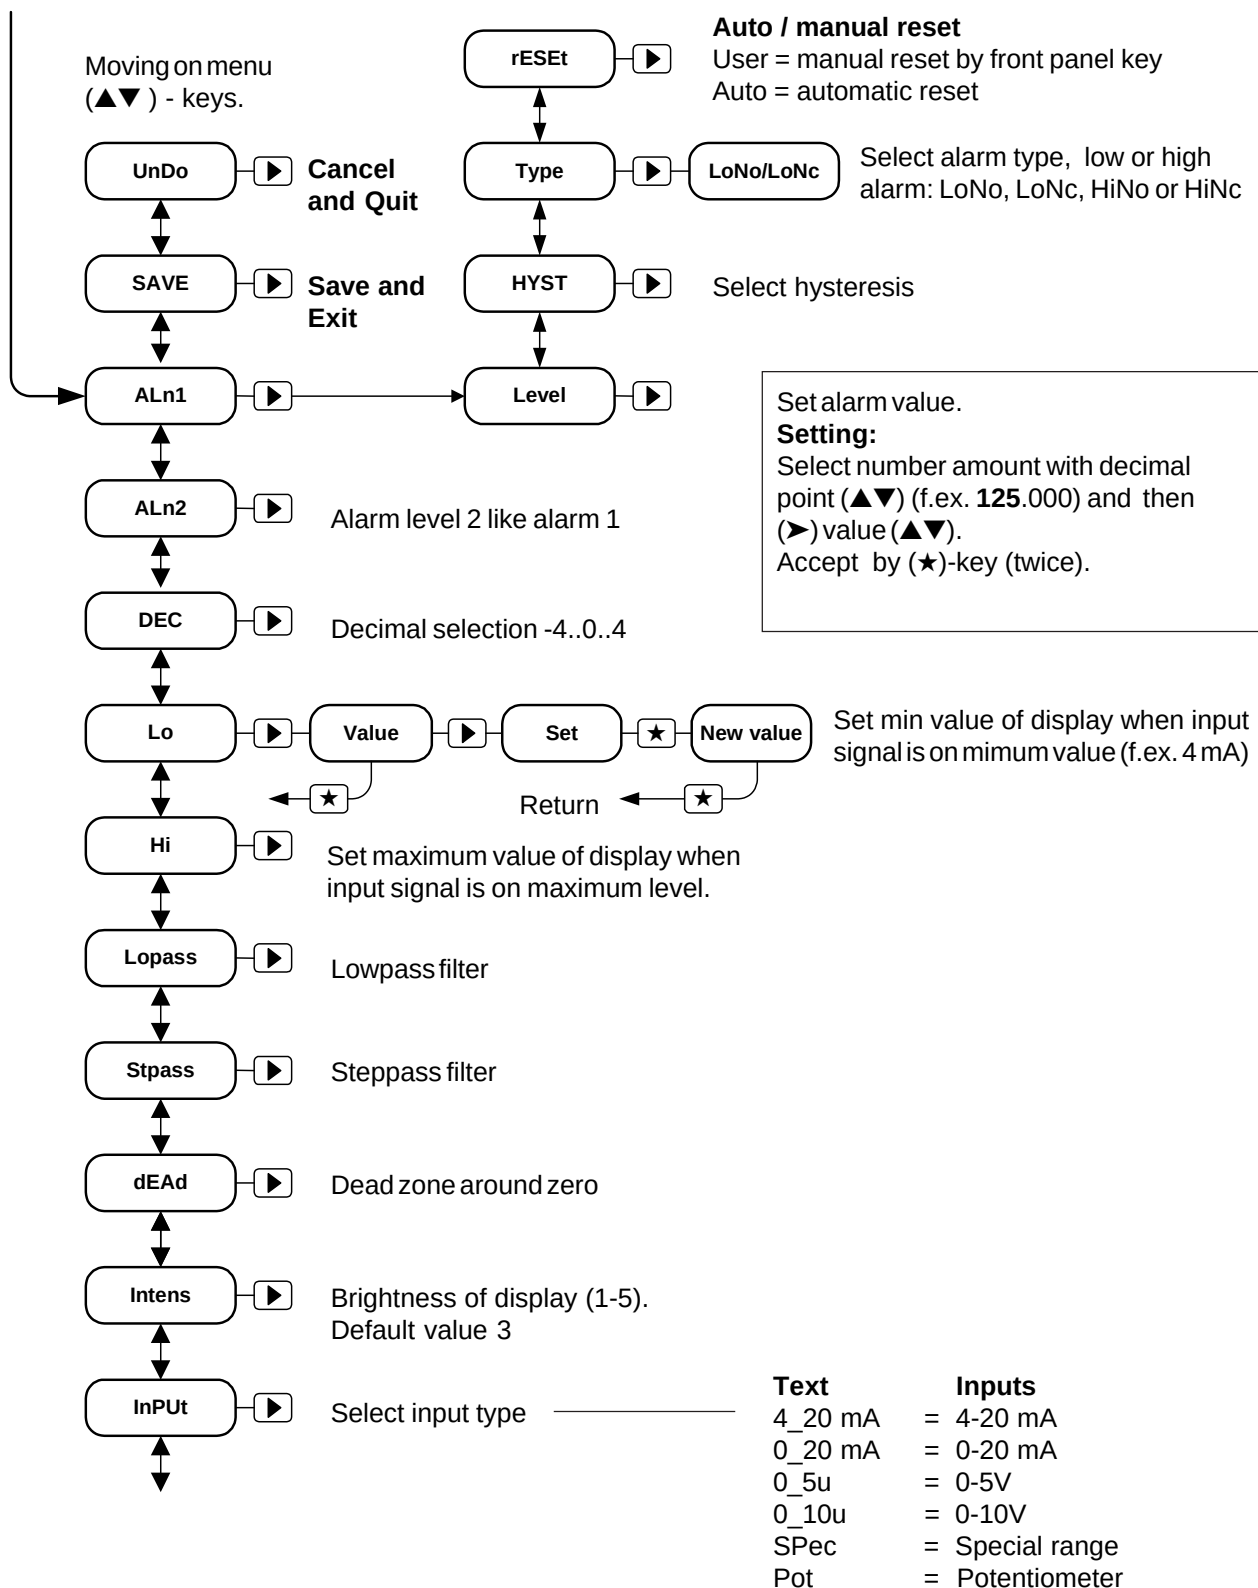

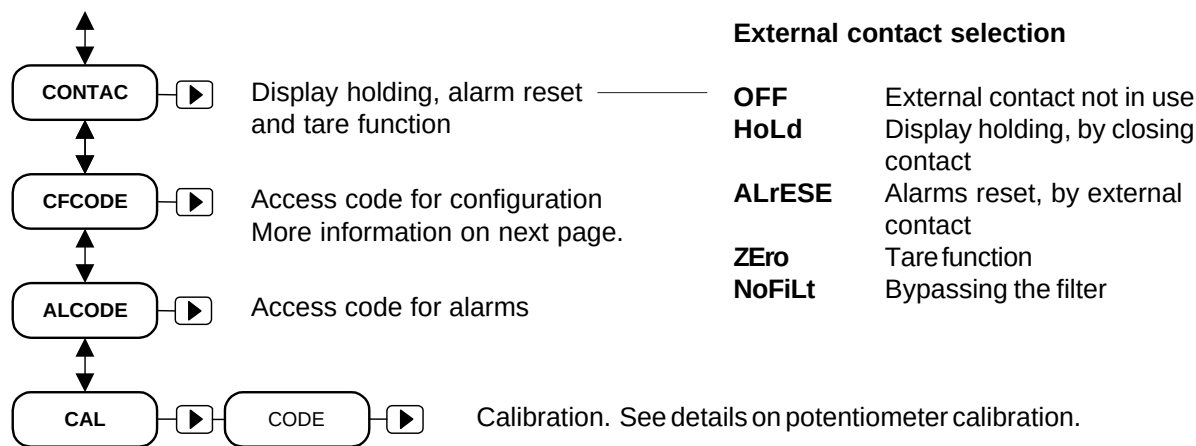

Configuration parameters

To enter into configuration mode press and hold ▲ and ★-keys simultaneously for 2 seconds. Save mode can be selected directly by pushing ★-key in main menu, otherwise ★-key moves backwards. Words printed in *italic* represent indicators display symbols.

Undo, Save (▶)

Exit configuration mode without saving changes (*Undo*) or save changes (*Save*).

Alarms

Alm 1 and Alm 2 (▶)

Level = alarm level
Hyst = hysteresis, High level alarm
Type = Alarm type selection
 Select one of the following
 LoNo, Low level, contact normal open
 HiNo, High level, contact normal open
 LoNc, Low level, contact normal closed
 HiNc, High level, contact normal closed

Reset **Auto or manual reset**
 User = manual reset from front panel or external contact (conf menu - **contac**)
 Auto = automatic reset

Dec (▶)

Number of decimals in display. Select 0...4 with ▲▼-keys and accept with ★-key. When Dec value is negative the corresponding number of last digits is rounded to zero. f.ex. Dec = -2: two last digits are always zero.

Lo, Hi (▶)


Display scaling. **Lo**-value represents display scaling at 4 mA (or 0 mA/0V) and **Hi**-value which represents display scaling at 20 mA (10V), F. ex. 4 mA=0.0 and 20 mA=100.0.

When value is in display it can be changed by pushing ▶-key or continue straight into SAVE mode with ★.

Lopass (▶)


First order digital lowpass filter for input. Functions like a RC circuit damping variations in the reading. Set the time constant in seconds (63 % of step change)

0.000 = no damping
 0.500 = normal damping
 8191 = maximum damping

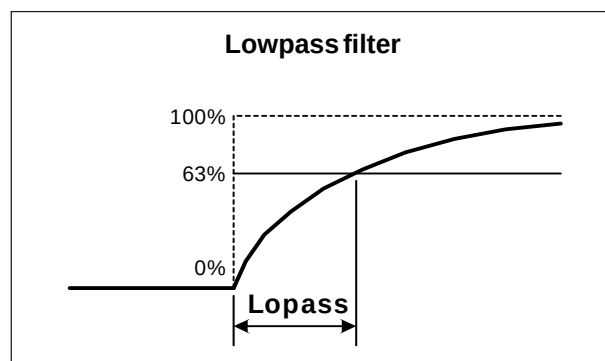

Stpass (▶)

Steppass filter. When strong damping (see Lopass filter) is used, it takes very long for the indicator to settle after large changes in input value. This can be eliminated with steppass filter. Normally the unfiltered input value (dashed line in the graph) fluctuates around the filtered value. However after large changes the sign of the difference between unfiltered and filtered value will remain unchanged for a while. When this time exceeds the Stpass value (in seconds) the lopass filter is reset and the indicator will jump to the current input value.

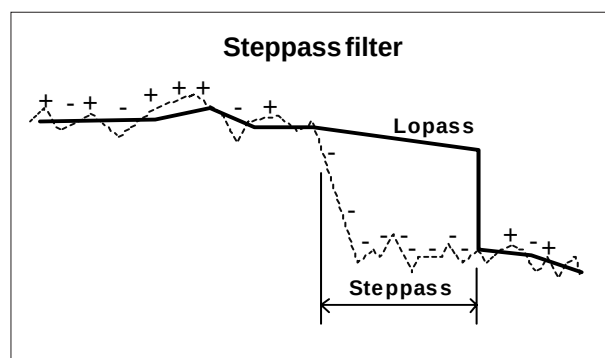

Dead (►)

Dead zone around zero. If the input reading is smaller than the Dead value, the display is rounded to zero. This is especially handy in weighing and flow measurement applications.

To prevent negative values only, set Dead = 0. To disable the dead zone, set Dead = -1 or any negative value.

Intens (►)

Display brightness 1-5 (st to select, accept with ★), factory default 4, (5=brightest).

Input selection

Input (►)	Select input
Display	Input
4_20 mA	= 4-20 mA
0_20 mA	= 0-20 mA
0_5u	= 0-5V
0_10u	= 0-10V
SPEC	= Factory settings
Pot	= Potentiometer

External contact function

Contac (►)

OFF	= External contact not in use
Hold	= Display holding, by external closing contact
ALrESE	= Alarms reset, by external contact (if user function selected from the reset function)
ZEro	= Tare function by external contact or front panel ★-key. Tare function resets of that moment display value. (Tare can be removed by pressing the front panel ★ and ►-keys at the same time)
NoFILt	= Lopass filter bypass. Use when there is a switch indicating large changes in input value.

Access code functions

Access code can be entered when the display shows **-Code-**. Access code is formed with ▲▼★►-keys. Each time key is pressed line (-) moves from left to right.

Entering access code must be started within 3 second after text **-Code-** appears to display.

Total number of combinations is $4^6 = 4096$.

Note! If You enter ★★★★★★, it means that access code is not used.

If configuration access code is forgotten, the access code can be reset by switching power off and holding down buttons ★ and ► while connecting power back again.

To remember access code better it is recommended to give 'names' to buttons: 1=▲, 2=▼, 3=★, 4=►. This helps You to form codes with numbers e.g. number 143311 = ▲►★★▲▲.

CFCode (►)

Access code for configuration mode. If You feel that You entered wrong code, You can enter it again. See detailed instructions above.

ALCode (►)

Access code for alarm level mode. Must be entered to access into alarm level setting mode from normal measuring mode.


Teaching potentiometer range

CAL (►)

Select text CAL into display with ▲▼-keys. Push ►. Enter access code ★★★★★★. Select with ▲▼-keys text **Pot** into display and led A1 lits. Turn potentiometer into minimum and press ►-key for 1 second. Select ▲▼ text **Pot** and led A2. Turn potentiometer into maximum position and press ►. Exit to main menu with ★-key.

2011 Connections


Input/output cards

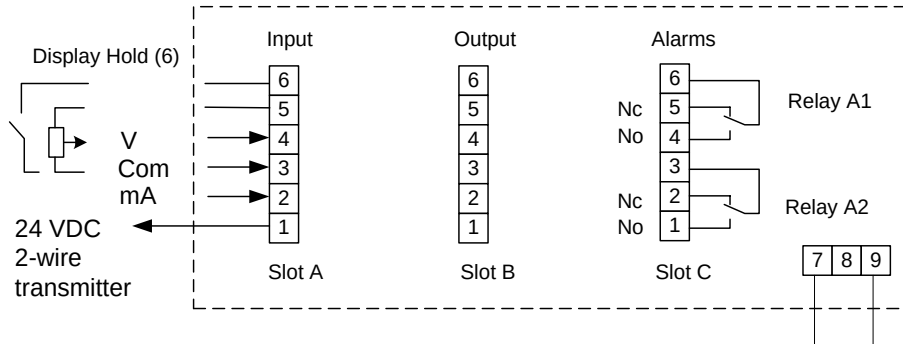


Slot A is for sensor input and slots B and C for optional cards.

Power supply 85..240 VAC (grey connector)
or 12..32 VDC (no polarity)
or 24VAC (green connector)


Voltage / current-input

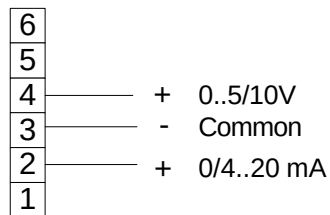


Potentiometer

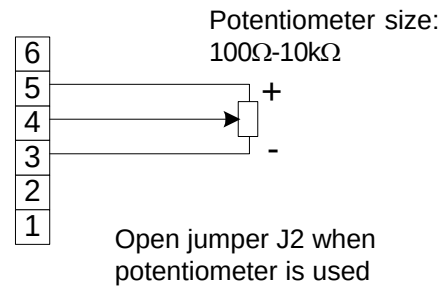


2-wire transmitter

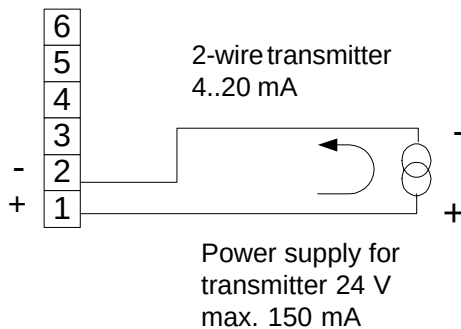

External contact

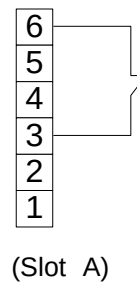


Sensor supply 24 VDC /150 mA

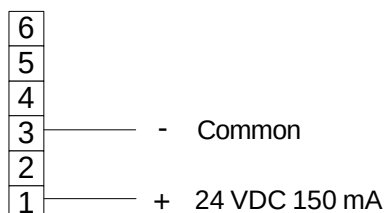


Large panelmeter construction

The 910 & 920 series panelmeters are modular and easy to assemble. According to customers wishes. The basic construction consists of mother board with three slots, A, B and C. Slot A determines meter type and provides always input signal. Slot B and C are interchangeable. As factory delivery input signal is always installed into slot A, mA output into slot B and alarms into slot C. In case of f.ex 4 alarms and relay card with 2 change-over contact (2 + 2 relays) are used, you must place second relay card into slot B. If

you accept only closing or opening relay contacts, you need only one relay card with 4 relays placed into slot C. The slot B is now usable for other optional outputs. You can have different types of meters by only changing the input card in slot A. Data sheet of each type of meter dictates the possible combinations. Recalibration of card is not needed; only scaling and other settings must be set by front panel keys.

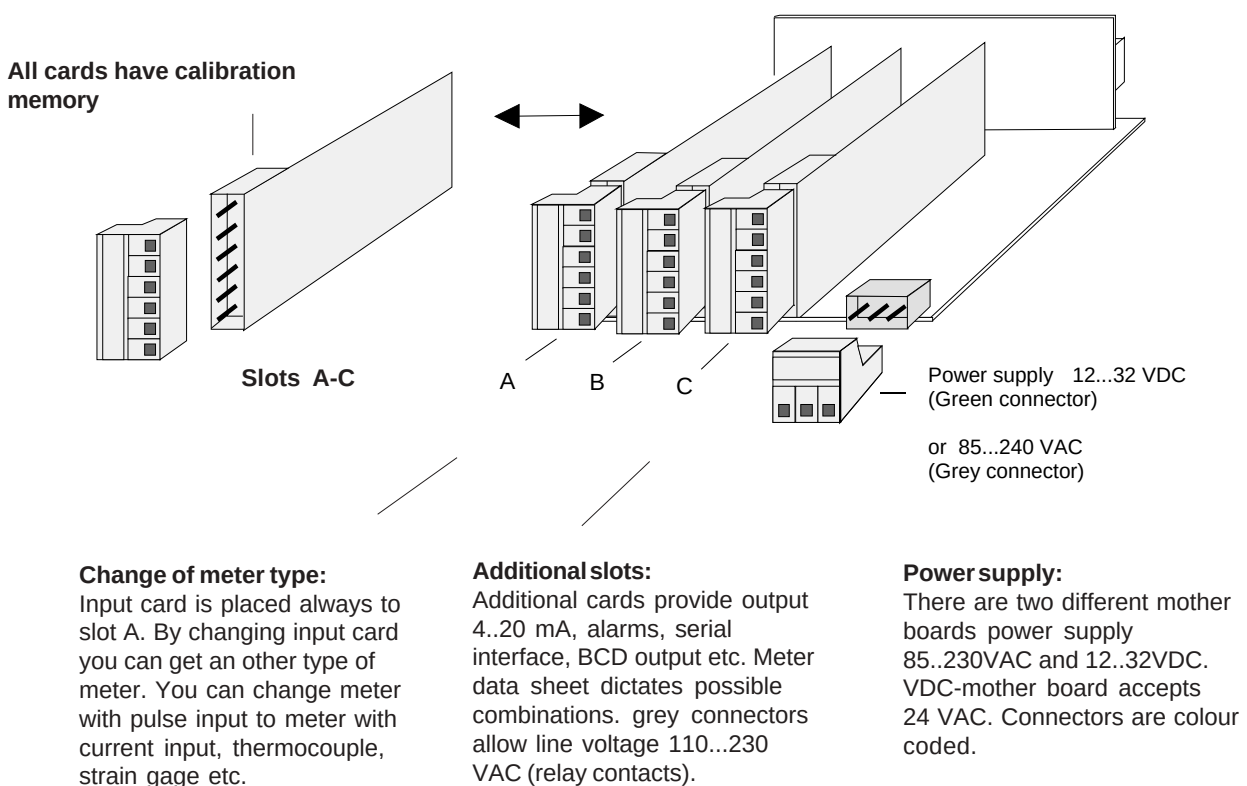

Modular display series 910 & 920

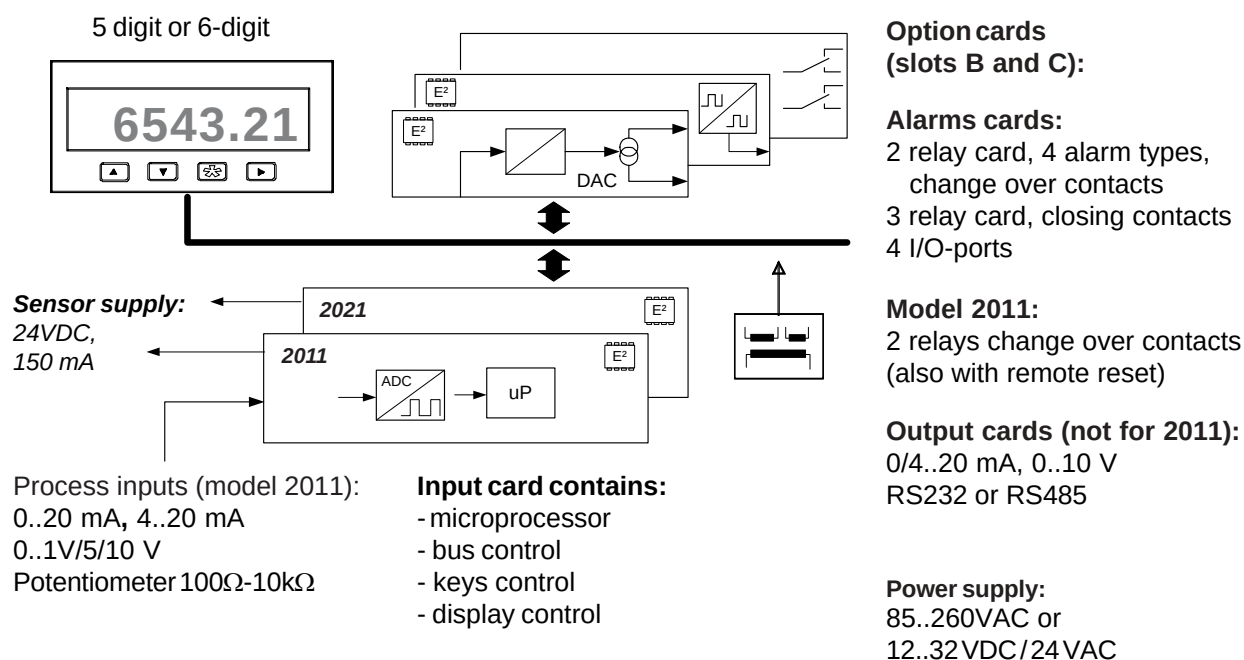

Indicator 2011 can have limited part of 2000 series functions. Model 2021 contains also process inputs but it can also measure RTD-sensors and thermocouples. 2021 has more accurate and faster A/D-converter (16 bit 1/64 000).

2000 series input and option cards:

2011-IN	Process input	2000-BASE	Base card with power supply
2021-MU	Multi input	2000-REL2	Alarm card, NO/NC
2031-IR	Infrared sensor input	2000-REL3	Alarm card, Closing contacts
2041-STG	Strain gage measurement	2000-OUT	Output card, U and I
2051-Hz	Scaleable frequency indicator	2000-RS	Serial output RS232 or RS485
2061-CNT	Counter input (max 5 kHz)	2000-I/O	4 pcs input /output ports (60 V / 100 mA)
2071-RS	Serial input RS232 / RS485		
2081-BCD	BCD-input (1-5 digits)		

Manufacturer:

Nokeval Oy

Yrittäjäkatu 12

37100 NOKIA

Tel. +358 (0)3 342 4800

Fax. +358 (0)3 342 2066

<http://www.nokeval.com>